ARCTICNORD CUSTOMER GUIDE

How to use your Daikin remote control

The everyday buttons on your Daikin wall unit's handheld remote, the extras worth knowing, and what to do if the remote goes missing.

Daikin wall units
Handheld remotes
Issue 1 · November 2026

01 The basics | 02 The modes | 03 Handy extras | 04 Clock and timers | 05 Symbols | 06 If something's not right

STYLISH · PERFERA
The full remote
Clock, weekly timer, intelligent eye, Flash Streamer, 3D airflow.
ARC466A


COMFORA
The simple remote
All the everyday buttons. Timers count down in hours. No clock.
ARC480A

SENSIRA
The simple remote
Everyday buttons, up and down swing only. Timers count down in hours.
ARC470A1


Not sure which? The model is printed inside the battery cover. Emura has its own menu-style remote: use the guide that came with it.

01 The basics

The same on every Daikin remote.

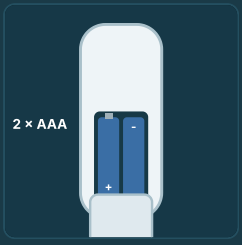

STEP 1
Batteries
2 × AAA. They last about a year. Change both together. A flashing screen means they're low.

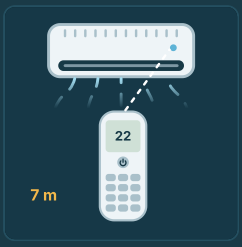


STEP 2
Point it at the unit
Works up to **7 metres** away, with nothing in the way.



STEP 3
On, off and mode
ON/OFF starts and stops it. **MODE** steps through Cool, Heat, Dry, Fan and Auto.

Each mode is explained in Part 02.

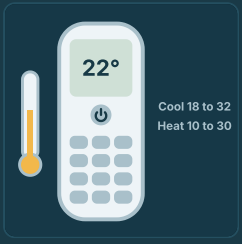


STEP 4
Set the temperature
Press the temperature **up** or **down** buttons. Cooling 18 to 32°C, heating 10 to 30°C.

In Dry you can't change the temperature or fan.



STEP 5
Fan speed
FAN steps through Auto, Quiet and five speeds. Auto is best most of the time.

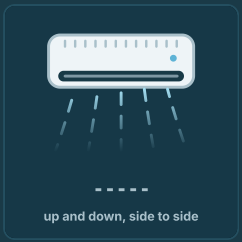

STEP 6


Air direction

SWING moves the flaps up and down. Press again to stop them where you like.

Stylish, Perfera and Comfora also swing side to side. Press both swing buttons together for 3D airflow on Stylish and Perfera.

02 The five modes in detail

Press MODE to step through them. Temperatures are Daikin's for Stylish; other models are close.

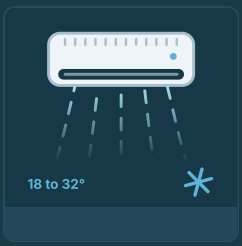


COOL

Cool

Cools the room to the temperature you set, **18 to 32°C**.

- **Cheapest to run** at 26 to 28°C. Close blinds on sunny days.
- When the room reaches your temperature, the fan stops for a while. That's normal.
- A trickling sound is water draining away. Normal.

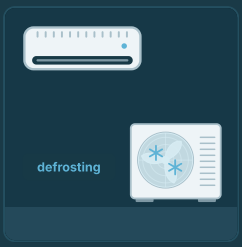


HEAT

Heat

Heats the room to the temperature you set, **10 to 30°C**. Works even when it's -15°C outside.

- **Cheapest to run** at 20 to 24°C.
- **Warming up:** no warm air for the first **1 to 4 minutes**.
- **Defrosting:** in cold, damp weather the outdoor unit ices up. It stops blowing warm air for **4 to 12 minutes** to clear it. A whistle or a little white mist after is normal.

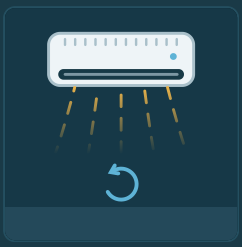

AUTO

Auto

Heats or cools by itself, switching between them to hold your temperature, **18 to 30°C**.

Good for spring and autumn, when one day needs heat and the next needs cooling.




DRY

Dry

Takes moisture out of the air. Use it on **damp, muggy days** when it feels sticky rather than hot.

You **can't** change the temperature or the fan speed in Dry.

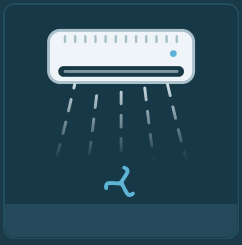

FAN ONLY

Fan only


Moves the air round the room. **No heating or cooling**, so you can't set a temperature.

Choose the fan speed and swing to suit.

Changed mode and nothing's happening? It waits up to **3 minutes** before starting again, to protect itself. Just give it a moment.

03 Handy extras

Check the table on the last page for which remote has which.

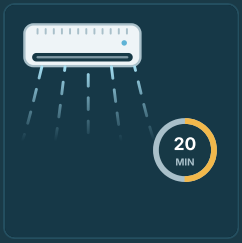

STEP 7

Powerful


Full power for **20 minutes** to warm or cool the room fast. Then back to normal.



STEP 8

Econo


Limits how much power the unit uses. Handy if other big appliances are on at the same time.

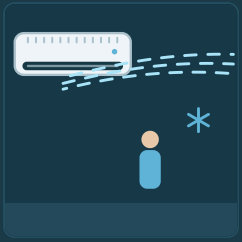

STEP 9

Comfort airflow

Stops air blowing straight at you: along the ceiling when cooling, down to the floor when heating.

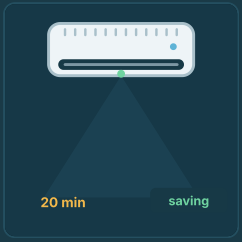

STEP 10

Intelligent eye

Stylish and Perfera. If nobody's in the room for **20 minutes**, it eases off 2°C to save energy.



STEP 11

Outdoor quiet and Flash Streamer

Stylish and Perfera. **Outdoor unit quiet** turns the outdoor unit down, nice at night. **Flash Streamer** helps clean the air while it runs.

04 Clock and timers

On Stylish and Perfera, set the clock first or the timers won't work.




STEP 12 · STYLISH AND PERFERA

Set the clock

1. Press **Clock**. The day and time blink.
2. Press **up** or **down** to set the day.
3. Press **Clock**. The time blinks.
4. Press **up** or **down** to set the time. Hold to go faster.
5. Press **Clock** to finish.

Set it again after a power cut or new batteries. Comfora and Sensira have no clock.

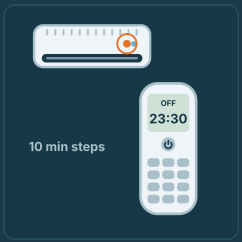

STEP 13 · STYLISH AND PERFERA

On and off timers

1. Press **OFF timer** (or **ON timer**). The time blinks.
2. Press **up** or **down** to pick the time. Each press is 10 minutes.
3. Press the same timer button again. The orange **timer lamp** on the unit lights.

Cancel: press the timer button again. **Both:** set an off time and an on time, for example off at 7:00 and on at 14:00.

> **Night set:** with the off timer on, it eases the temperature for sleep: 0.5°C up in cooling, 2°C down in heating.



STEP 14 · COMFORA AND SENSIRA

Count-down timers

- **OFF timer:** with the unit running, press it. Each press adds **1 hour**. Comfora 1 to 12 hours, Sensira 1 to 9.
- **ON timer:** with the unit off, press it. Each press adds 1 hour, up to 12.
- **Cancel:** press the timer cancel button. The timer lamp goes off.

New batteries wipe the timers. Set them again.




STEP 15 · STYLISH AND PERFERA

Weekly timer: add a setting

1. Press **Weekly**. Use **up**/**down** to pick the day and number, 1 to 4. Press **Select**.
2. Pick **ON** or **OFF**. Press **Select**.
3. Set the time, in 10-minute steps. Press **Select**.
4. For ON, set the temperature, 10 to 32°C. Press **Select**.
5. Add another, or press **Weekly** to finish. The timer lamp lights orange.

Easier still: set it in the Daikin **Onecta** app.

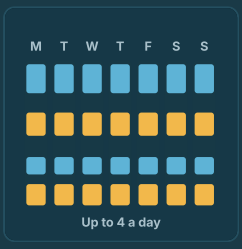

STEP 16 · STYLISH AND PERFERA

Weekly timer: copy, pause, delete

- **Copy a day:** press copy, pick the day to copy, **Select**, pick the day to copy to, **Select**.
- **Pause it:** press **Weekly** while its symbol shows. Press again to switch back on.
- **Delete one:** pick it, choose blank, **Select**.
- **Delete a day:** pick the day, hold the button about 5 seconds.
- **Delete all:** on the normal screen, hold the button about 5 seconds.

An on or off timer takes over while it's set.

05 What the symbols mean

On the remote's screen. Drawn simply here, so yours may look a little different.

Running
The unit is switched on.
`Stylish, Perfera, Sensira`

Mode
Auto, Cool, Heat, Dry or Fan only.
`All`

22° Set temperature
The temperature you have asked for.
`All`

Fan speed
Auto, or speeds 1 to 5. More bars, more air.
`All`

Indoor quiet
Fan at its quietest.
`All`

Powerful
Full power for 20 minutes.
`All`

Econo
Uses less power.
`All`

Outdoor quiet
Outdoor unit turned down.
`Stylish, Perfera`

Signal
The remote is sending to the unit.
`All`

Comfort airflow
Air along the ceiling or floor, not at you.
`All`

Intelligent eye
Eases off when the room is empty.
`Stylish, Perfera`

Up and down swing
Flaps sweep up and down.
`All`

Side to side swing
Louvres sweep side to side.
`Stylish, Perfera, Comfora`


Flash Streamer
Air cleaning is on.
`Stylish, Perfera`

ON timer
The unit will switch on later.
`All`

OFF timer
The unit will switch off later.
`All`

Weekly timer
Weekly timer is on.
`Stylish, Perfera`

MON 8:00 Day and time
The clock.
`Stylish, Perfera`

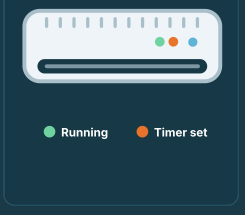


ON THE INDOOR UNIT

The lamps on the unit

- **Green operation lamp:** the unit is running.
- **Orange timer lamp:** a timer or the weekly timer is set.
- **Operation lamp flashing on a two-room system:** it's waiting for the other room. Not a fault.

06 If something's not right

Most of these take seconds.

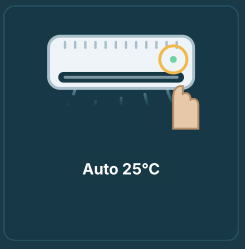

STEP 17

Remote lost or batteries flat

Press the **ON/OFF** button on the indoor unit itself. It runs in Auto at **25°C**. Press it again to switch off.

A button doesn't seem to work

- **Powerful** can't run with Econo, Comfort airflow or Outdoor quiet. The last one you pressed wins.
- **Intelligent eye** doesn't work with Powerful.
- Choosing up-and-down swing turns **Comfort airflow** off.

The remote isn't working at all

- Change both batteries, then set the clock again.
- Stand closer, within 7 metres, and check nothing's in the way.
- Fluorescent lights can block the signal. Try with them off.

Which features does your remote have?

Stylish and Perfera have the full remote. Comfora and Sensira have the simple one.

FEATURE	STYLISH · PERFERA	COMFORA	SENSIRA
Powerful, Econo, Comfort	Yes	Yes	Yes
Side to side swing	Yes, plus 3D	Yes	By hand
Intelligent eye	Yes	No	No
Outdoor quiet	Yes	No	No
Flash Streamer	Yes	No	No
Clock and weekly timer	Yes	No	No
On/off timers	Clock time	1 to 12 hours	Hours

Help from Daikin

Your unit's full user guide is on Daikin's website. Search for the model number on the label of your indoor unit.

Daikin UK: daikin.co.uk

Phone control: the free Daikin Onecta app does all this and more, from anywhere.

Your yearly service keeps it running well and keeps your warranty in place.

ArcticNord, a Nord Group company, part of Qualis Energy Limited.

Daikin, Stylish, Perfera, Comfora, Sensira, Emura, Flash Streamer and Onecta are trademarks of Daikin Industries. Remotes shown are simplified drawings.